



Installation Instructions



12" Grab Bar for ADA Application

18" Grab Bar for ADA Application

36" Grab Bar for ADA Application

42" Grab Bar for ADA Application

Package Includes

- ✓ Stainless Steel Construction
- ✓ Concealed mounting for a clean look
- ✓ 1-1/4" bar diameter
- ✓ 2-1/2" flange diameter
- ✓ Bar extends 1-1/2" from wall
- ✓ Supports up to 250 lbs.
- ✓ Meets ADA load requirements when properly installed
- ✓ All hardware necessary for satisfactory installation



Important notes for proper Installation



DO NOT INSTALL this product without reading and understanding the warning instructions. If you are unable to understand these warnings and instructions, contact professional or technical personnel for assistance- otherwise injury may occur.



GRAB BAR LOCATION

For proper mounting heights and location, consult with your state and local code official, they have jurisdiction over the installation



SOLID SUPPORT

* Grab Bar ends must be mounted with both end position over a wall stud. Stud finder must be used to locate wall studs, Contractor is responsible for installing Grab Bar to wall studs as instructed.

* Secure through wallboard or tile to the wall so as to hold a minimum of 250 pounds.


* At least two (2) of the three (3) wood screws provided must be used on each end of the Grab Bar, top and bottom, to properly secure Bar to wall. Standard size wall studs limit using more than two (2) wood screws.

* If using a drill to install wood screws, a drill bit extension must be used to avoid damaging the Grab bar.

Tools Needed



Safety Glasses

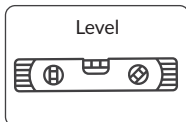


Level




Cordless Drill


Drill bit
Ø 1/4" Carbide
Drill for tile

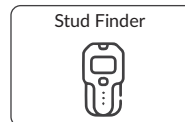


Stud Finder

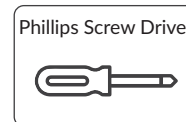


Phillips Screw Driver

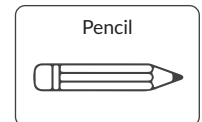

Pencil

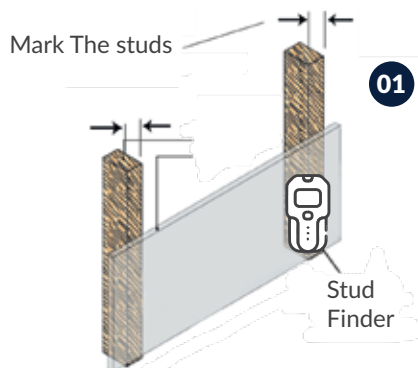

01 FOR SAFETY REASONS, GRAB BARS MUST MOUNT TO STUDS ONLY. With the stud finder tool, locate and mark position of the studs.

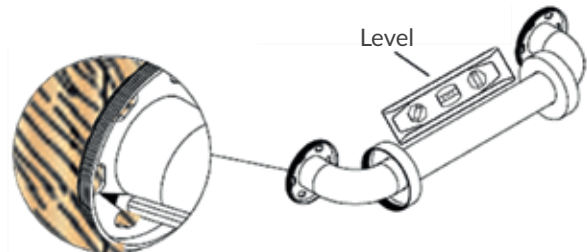

02 Unscrew flanges and pull back from the two ends of the grab bar. Position the grab bar so that the mounting ends are against the studs. Make sure the bar is leveled. Mark drill hole locations.



03 Remove Grab Bar from wall, use drill to drill holes into the wall and wall studs at the marked position.

Ø 7/64" Drill Bit for the Wood Stud
Ø 1/4" Carbide Tip Drill for ceramic Tile

04 Tighten all screws using a Phillips screwdriver. Secure grab bar to wall. If a cordless drill is used, MAKE SURE TO USE A DRILL BIT EXTENSION in order to avoid damage to finish.

Grab Bar must be secured with at least two (2) of the three (3) screws at each end

05 Once the grab bar is SECURELY installed, screw flanges onto threaded base. Feel free to use BLUE loctite if needed.

06

Limited Warranty

MAC FAUCETS warrant all MAC Faucets products to be free of defects for a period of one year from date of purchase. MAC FAUCETS will replace, free of charge, during this warranty period, parts that prove defective when properly installed and under normal use and service. Damage that occurs as a result of abuse, improper installation, environmental conditions, or improper application will void this warranty. Products or components that have been altered or in any way modified will not be covered under this warranty. This warranty does not cover installation or any other labor charges. This warranty does not cover shipping and handling of both replacement parts and returned defective parts. Defective products must be shipped back to MAC FAUCETS facilities with postage and handling prepaid, along with dated proof of purchase. Replacement parts are under warranty only for the remaining period under the initial warranty.

Other Variants

MPGB-8 Matching Pair, One 36" & One 42" Grab Bars



TMGB-3-Triple Matching Grab Bars, One 18", One 36" & One 42" Grab Bars



QMGB-12 Quadruple Matching Grab Bars: One 12", One 18", One 36" & One 42" Grab Bars

