




Installation Instructions

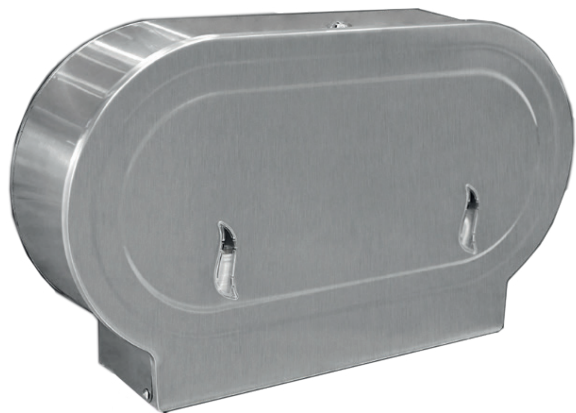




TH-4

Package Includes

- ✓ Toilet Paper Dispenser
- ✓ Stainless Steel Construction
- ✓ Wall Mounting Template
- ✓ Jumbo Size / Toilet Paper
- ✓ Mounting Hardware
- ✓ All hardware necessary for satisfactory installation



Tools Needed



01



02

03


04

05

Drill Holes Ø 1/4"




Please cut for drilling holes

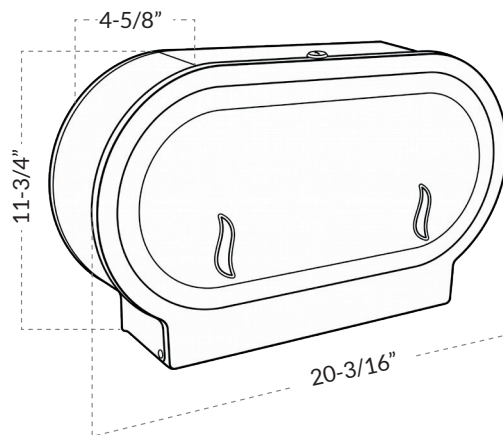

Once the location for the Tissue Holder has been decided, proceed with the installation steps as outlined below.


1. Cut the template from the back of the box.
2. Use a level and align it with the top line of the template.
3. Use painters tape to hold the template in place.
4. Drill holes for supplied plastic anchors.

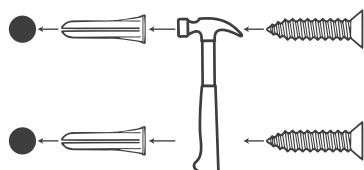



5. Place the plastic anchors in the holes and push them with the help of the hammer.
6. Align the holes in the holder with the holes of the anchors, insert screws, and fasten with a Phillips screw driver until the Tissue Holder is flush against the wall.



Installation

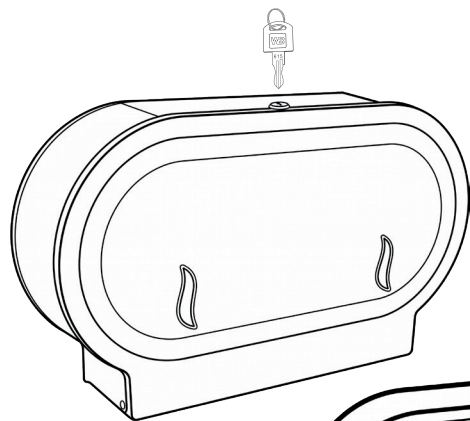

- 06** Open the cover with supplied key

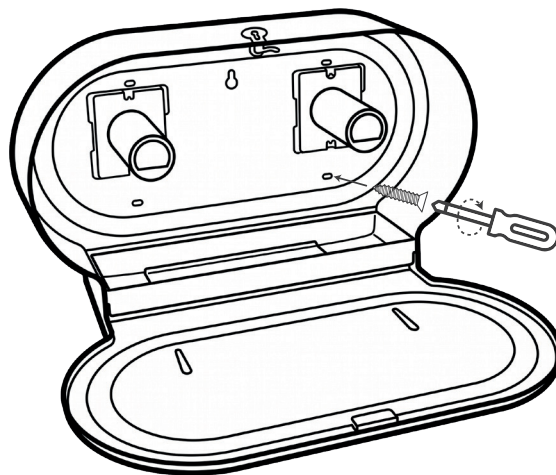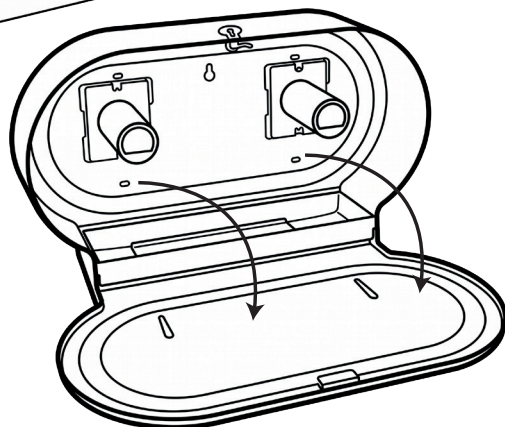

- 07**
- Affix the tissue dispenser against the wall.
 - Use a level to make sure it is straight.
 - Use 4 screws to securely attach the dispenser to the wall
 - Tighten the screws to keep it firmly in place.

Use and Maintenance



Be careful when opening the packaging, clean the surface and the product before installing



Do not use powder detergents, polishing powders, rough cloths or any corrosive substances, to clean the product.



Please use water or neutral detergent to clean the surface of the products, and then dry them with a soft towel.



When using acid (alkaline) detergent to clean the objects next to the products, it may damage the surface of the products, please be very careful

Limited Warranty

MAC FAUCETS warrant all MAC Faucets products to be free of defects for a period of one year from date of purchase. MAC FAUCETS will replace, free of charge, during this warranty period, parts that prove defective when properly installed and under normal use and service. Damage that occurs as a result of abuse, improper installation, environmental conditions, or improper application will void this warranty. Products or components that have been altered or in any way modified will not be covered under this warranty. This warranty does not cover installation or any other labor charges. This warranty does not cover shipping and handling of both replacement parts and returned defective parts. Defective products must be shipped back to MAC FAUCETS facilities with postage and handling prepaid, along with dated proof of purchase. Replacement parts are under warranty only for the remaining period under the initial warranty.